


Venetian Blinds measuring instructions

Long and failure-free operation of a window shutter depends not only its high quality but also on correct fit and installation. To make the cover fit perfectly, the chosen place needs to be correctly and carefully measured.

You need to strictly follow the below supportive drawing:

Fitting inside a window recess

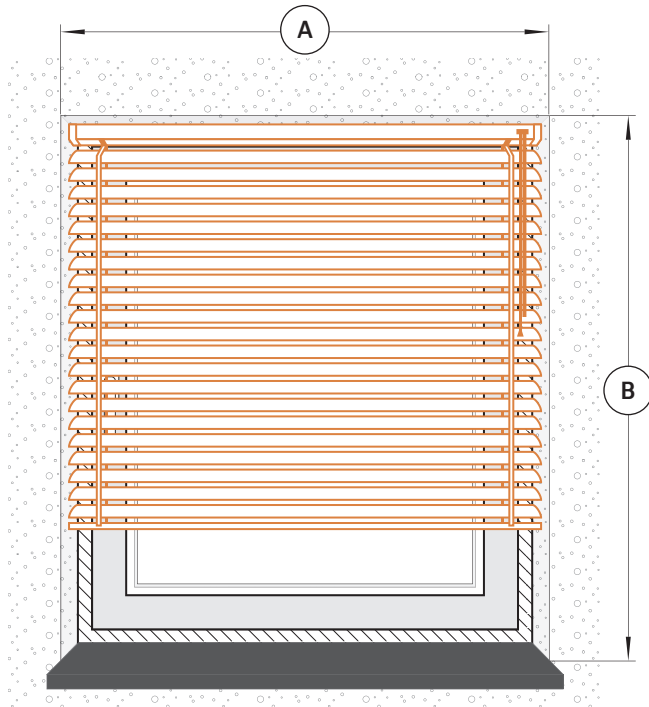


A - WIDTH OF THE RECESS

B - HEIGHT OF THE RECESS

Use this option if you want install the venetian blind inside window recess. Measure the window recess in 3 places as shown above, and give as with the smallest measurement. We will deduct a small amount to allow the venetian blind cover the sides and bottom and enable its proper functioning. Is usually 1 cm in width and up to 1 cm in length.

** The upper blind mechanism will cover about 2 cm in height from window recess (if you chose 50mm system the mechanism will cover 5cm in height)*

Fitting outside window recess

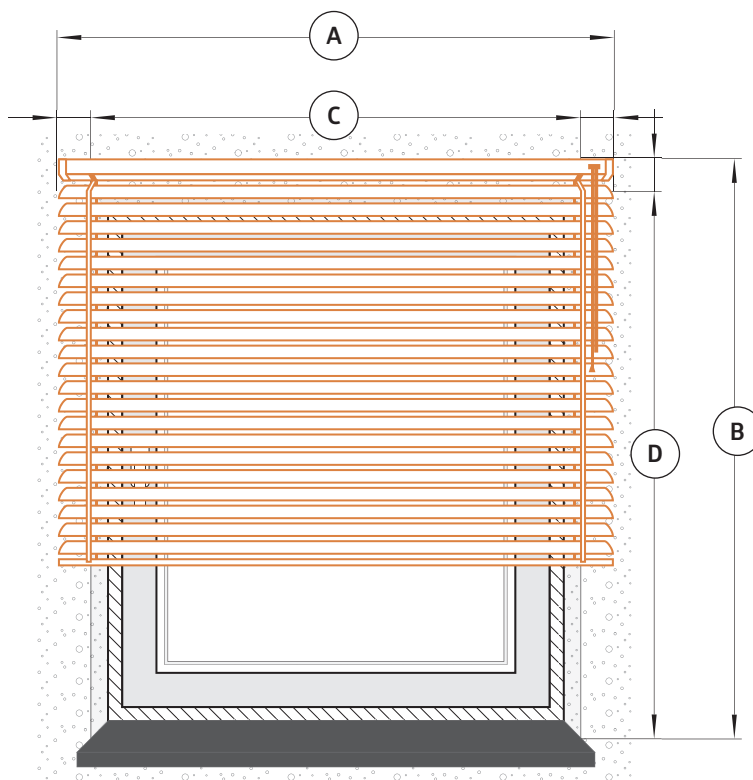

A - WIDTH OF THE BLINDS

B - HEIGHT OF THE BLINDS

C - WIDTH OF THE RECESS

D - HEIGHT OF THE RECESS

Use this option if you want install the venetian blind outside window recess. We suggest that the blind is 8-10 cm wider each side than window recess. Also add 8-10 cm above and below window to be sure that the blind will cover the window.

** The upper blind mechanism is 2 cm height and its contained in height size of the blind. (if you chose 50mm system the blind mechanism is 5 cm high)*

** All dimensions must be entered in millimeters*